

Network and Web Enable Environmental Monitor Monitor and Manage in Real-Time





- ●E-mail notification
- Full SNMP capabilities
- •4 user defined thresholds
- Full Password Protection
- Graphing
- Data Encryption
- •2 External Sensor Ports
- •Temperature and Humidity Sensor Included

External Sensor Port:

The SH-2+'s external sensor port allows you to add any one of the following optional sensors:

- Additional temperature sensor with up to 60 ft of cable
- Humidity sensor with up to 60 ft of cable
- Water sensor
- Voltage sensor
- Airflow detector
- Dry contact switch*
- * The external sensor port supports most two-wire, on/off, or open/closed type sensors.

Features:

- Requires no software
- Four user defined threshold settings
- On board graphing capability
- Sends e-mail notifications
- Sends SNMP traps to 4 destinations
- Supports SNMP polling
- Supports DHCP
- Full Password Protection
- Internal web server
- 0 U rack mountable
- Fully compliant with all operating systems
- Includes easy to read documentation and

helpful utilities

- Free trial version of OverTime
- MIB integrates with all popular NMS
- 1 year limited warranty
- Free technical support via e-mail

Specifications:

Ports: RJ-45

Power: 9.0V DC 500ma

LED Indicators: Power, Network

Connection, Activity,

2 Port Status Indicators

Certification: FCC B, CE Mark
Cabling Category: 5 UTP or STP

Dimensions: 4" x 2.5" x 1.5"


Weight: 7 oz.

Mounting: 0 U or desktop

Copyright © 2004 Uptime Devices, Inc. 3160 Bee Caves Rd. Suite 200 Austin, TX 78746 I: 1.866.665.6582 P: 512.328.1800 F: 512.328.1844



Network and Web Enable Environmental Monitor Monitor and Manage in Real-Time

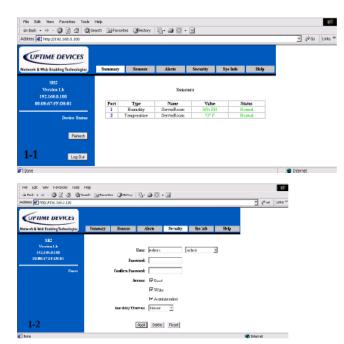



1.1 SH-2+ Summary View shows the data provided by the sensors plugged into your device.

1.2 SH-2+ Security
Screen gives you the
ability to change your
administrative
information for your
SH-2+.

1.3 SH-2+ System
Info Screen allows
you to configure
your SH-2+'s
network settings.

1.4 SH-2+ Sensor View gives you a detailed description of the sensors in you device and allows you to change the settings for them.

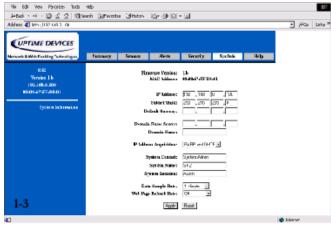

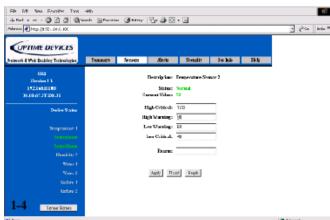

Copyright © 2004 Uptime Devices, Inc. 3160 Bee Caves Rd. Suite 200 Austin, TX 78746 I: 1.866.665.6582 P: 512.328.1800 F: 512.328.1844